














Parts Manual

Mfg. No: 20M307-0001-F1

Model Components	Page
Alternator, Electric Starter, Fuel Supply, Ignition.	4
Blower Housing/Shrouds.	6
Blower Housing/Shrouds, Flywheel, Rewind Starter.	8
Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Operator's Manual, Piston/Rings/Connecting	10
Carburetor, Kit - Carburetor Overhaul.	14
Controls, Governor Spring.	16
Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Valves.	20
Exhaust System.	22
Replacement Engine - US & Canada.	24

Not For
Reproduction


DUAL CIRCUIT	DUAL CIRCUIT	10-16 AMP	DC ONLY	AC ONLY	DUAL CIRCUIT
474B	474C	474D	474F	474G	474H
NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.					
1119	578A	878	526 501	526 501A	415A 892A 990A

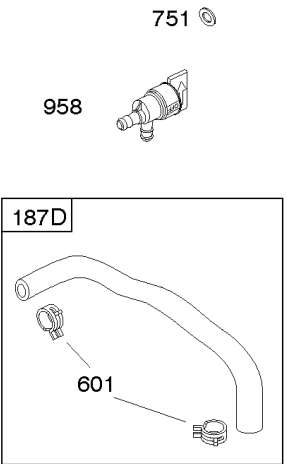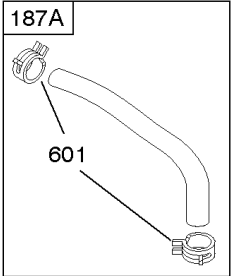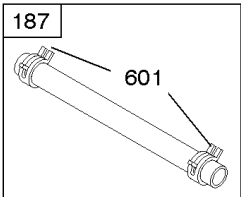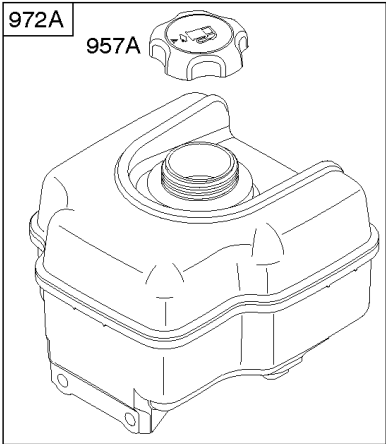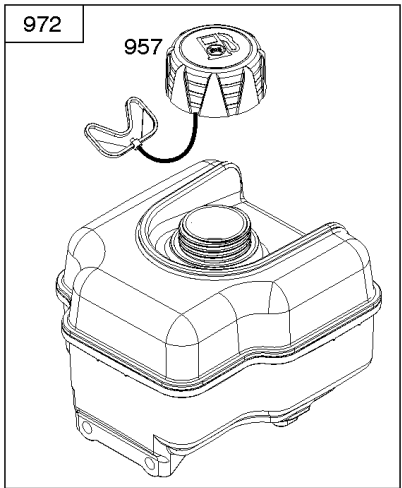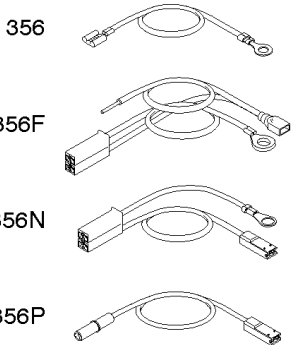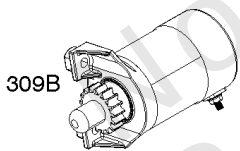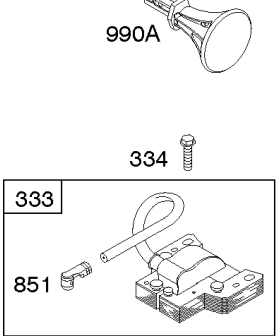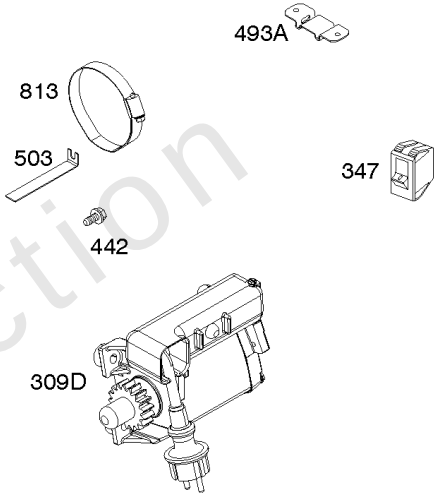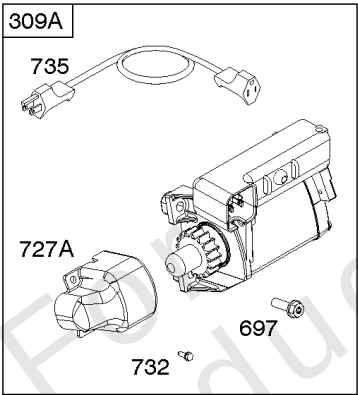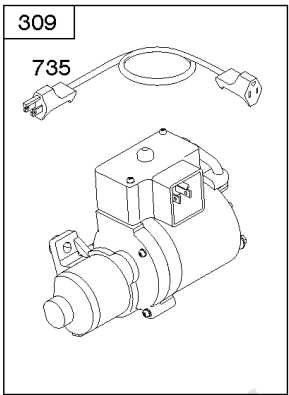

190


Alternator, Electric Starter, Fuel Supply, Ignition

REF NO	PART NO	QTY	DESCRIPTION
187	791766		LINE, Fuel -(15" Long)(Cut to Required Length)
187A	791869		LINE, Fuel
187D	791879		LINE, Fuel
190	699220		SCREW -(Fuel Tank)
309	591036		MOTOR, Starter -Used After Code Date 12052000
309A	795909		MOTOR, Starter -Used Before Code Date 12052100
333	492341		ARMATURE, Magneto
334	699477		SCREW -(Magneto Armature)
347	795333		SWITCH, Rocker
356	695630		WIRE, Stop
356F	793206		WIRE, Stop
356P	795849		WIRE, Stop
356N	798847		WIRE, Stop
442	790282		SCREW -(Starter Strap)
474G	797090		ALTERNATOR -(AC Only)
493A	691177		BRACKET, Mounting
503	691532		STRAP, Starter
526	690297		SCREW -(Regulator)
578A	792576		WIRE ASSEMBLY
601	791850		CLAMP, Hose
697	795012		SCREW -(Drive Cap)
727A	697465		COVER, Starter Drive
732	699200		SCREW -(Starter Drive Cover)
735	795901		CORD, Starter
751	794839		WASHER -(Stop Wire)
813	690635		CLAMP
851	692424		TERMINAL, Spark Plug
878	398661		HARNESS, Wiring
892A	791944		SWITCH, Key
957	799719		CAP, Fuel Tank -(Plastic)
957A	792647		CAP, Fuel Tank -(Plastic) (Fresh Start)
957C	698109		CAP, Fuel Tank -(Plastic)
957B	795027		CAP, Fuel Tank -(Plastic)
958	698180		VALVE, Fuel Shut Off -(Plastic)
972	799863		TANK, Fuel -(Plastic)
972A	-----		Tank-Fuel -(Plastic) (No Longer Available)(For Replacement, Order Reference 972)
990A	794696		SET, Key
1119	699772		SCREW -(Alternator)

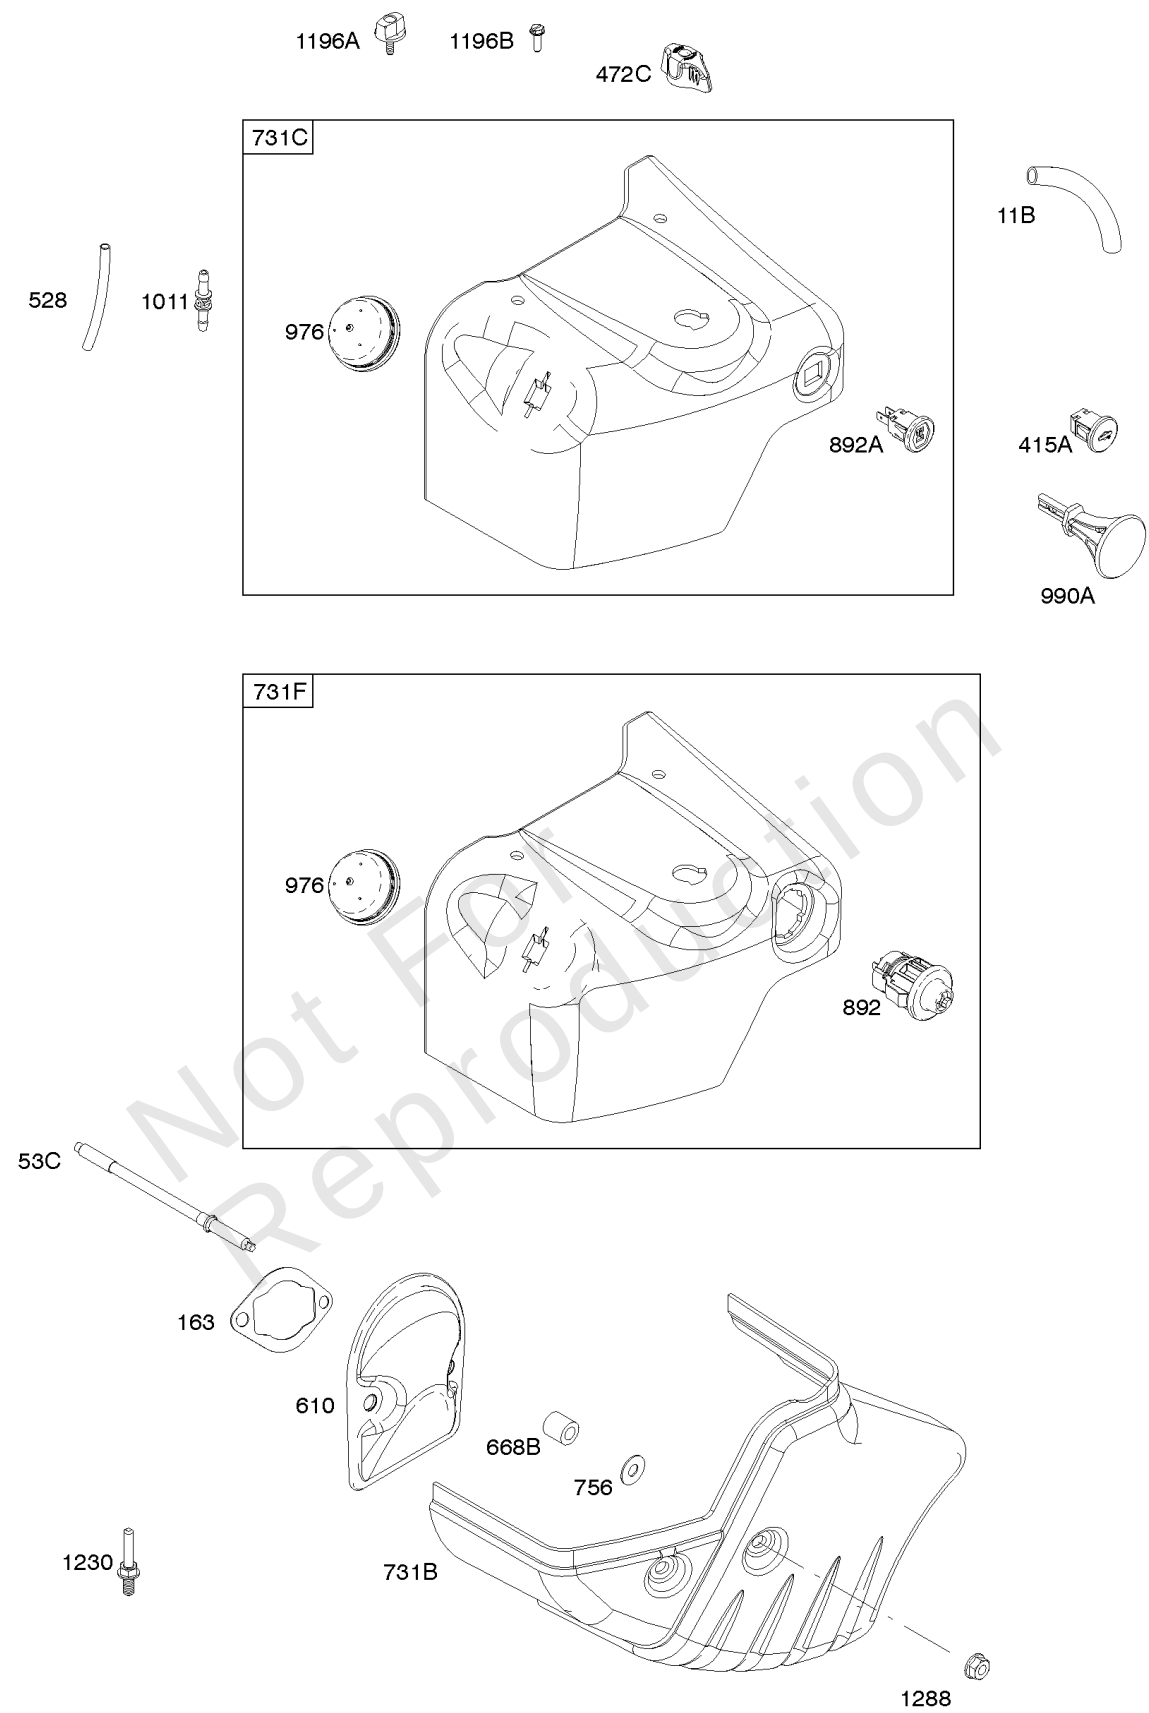

Blower Housing/Shrouds

REF NO	PART NO	QTY	DESCRIPTION
11B	696750		TUBE, Breather
53C	795017		STUD -(Carburetor)
163	692277		GASKET, Air Cleaner -(Air Cleaner)
472C	791948		KNOB, Choke Shaft
528	793006		HOSE, Primer -(Cut To Required Length)
610	794541		ARRESTER, Intake
668B	794539		SPACER
731B	794540		HOOD, Snow
731C	793621		HOOD, Snow
756	794839		WASHER -Snow Hood
892A	791944		SWITCH, Key
976	793382		PRIMER, Carburetor
990A	794696		SET, Key
1011	794544		TUBE, Vent
1196A	-----		Screw -(Snow Hood) (No Longer Available)(Use Screw Reference 1196B)
1196B	798785		SCREW -(Snow Hood)
1230	699847		STUD -(Control Bracket)
1288	794838		NUT -(Snow Hood)

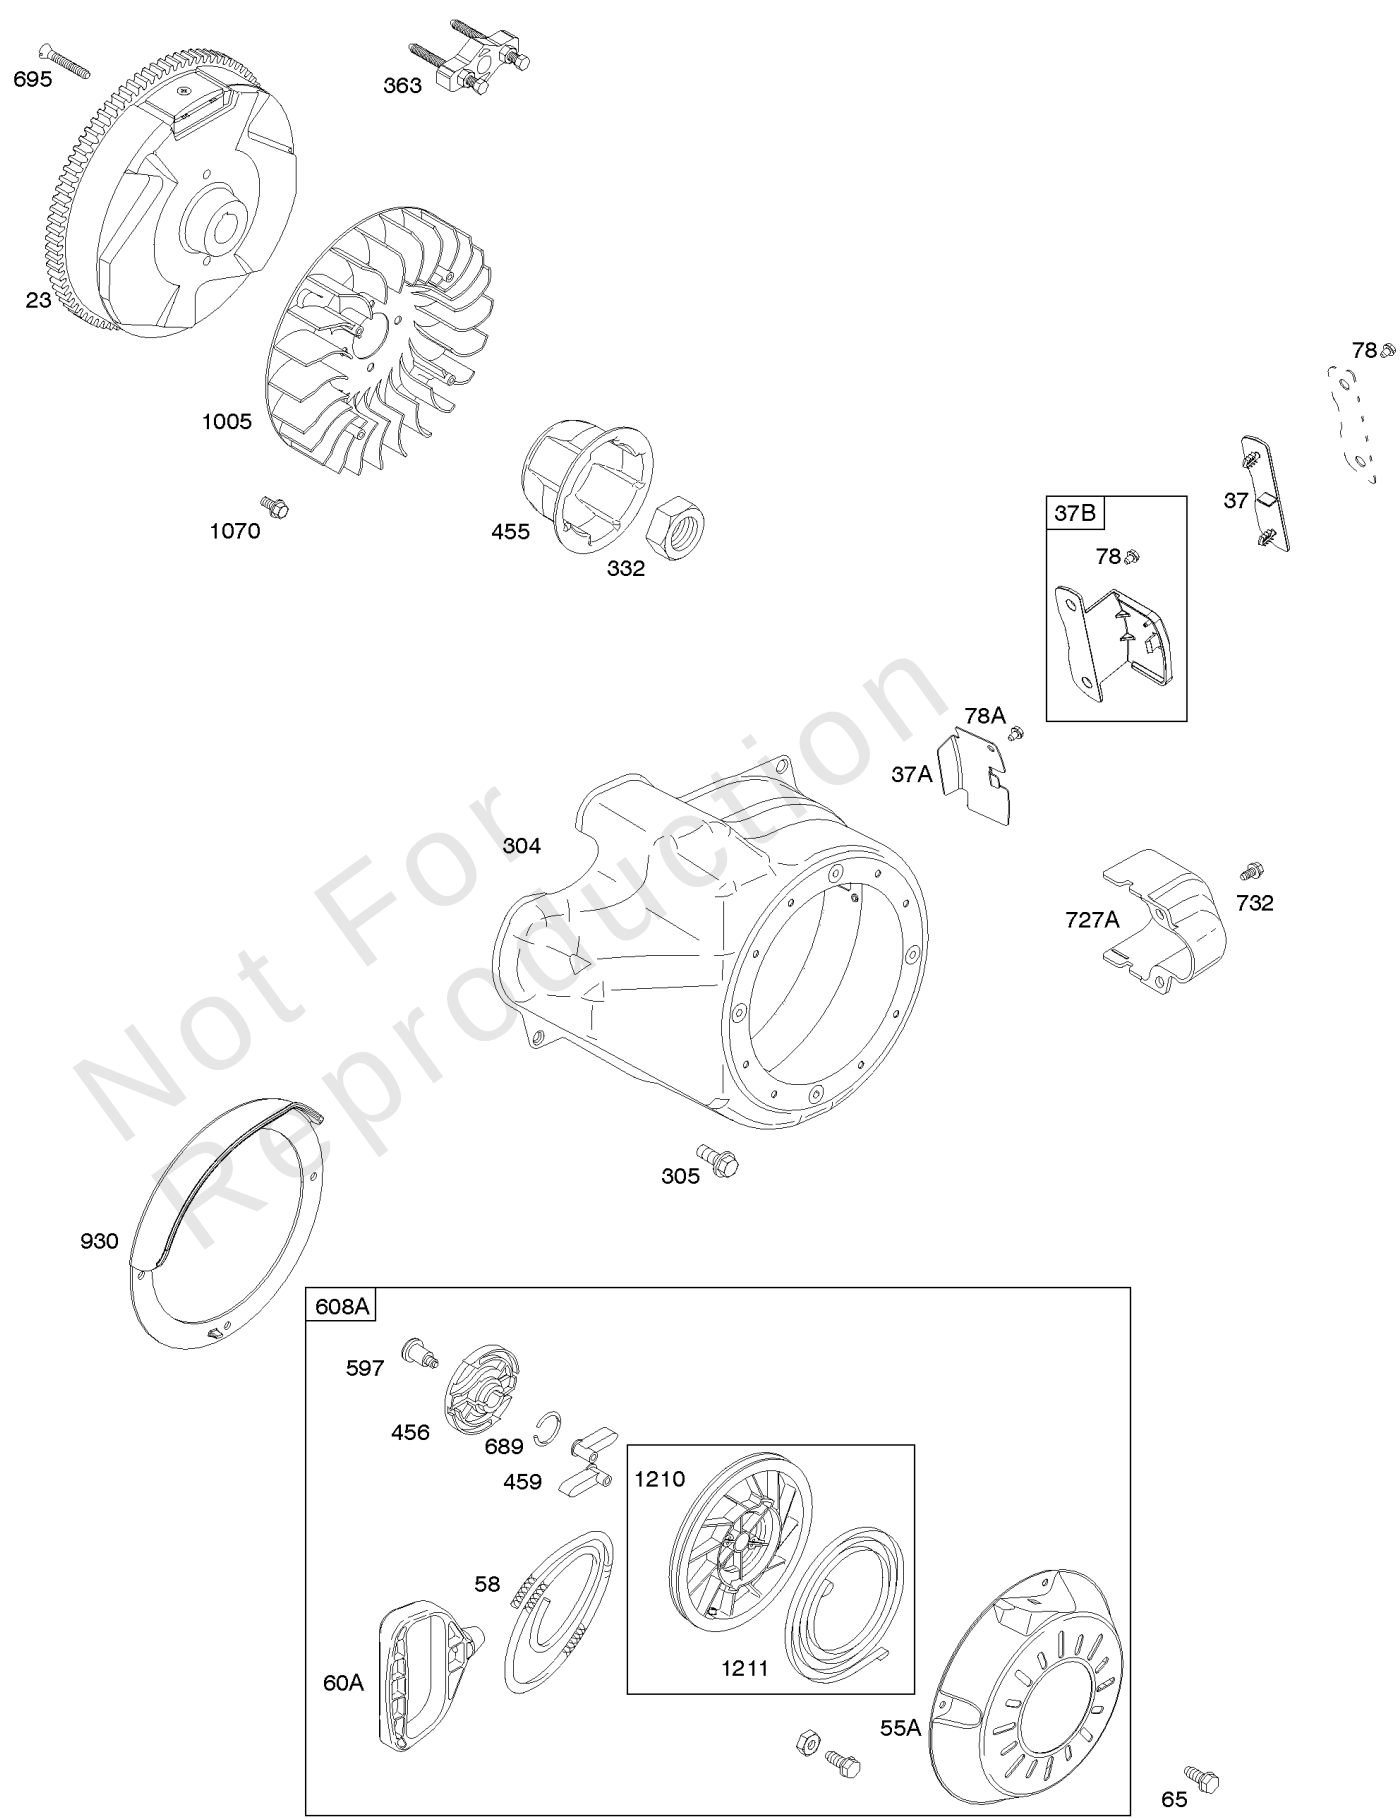

Blower Housing/Shrouds, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	794812		FLYWHEEL
37	795715		GUARD, Flywheel
37A	699047		GUARD, Flywheel
37B	591544		GUARD, Flywheel
55A	696710		HOUSING, Rewind Starter
58	693389		ROPE, Starter -(Cut To Required Length)
60A	699334		GRIP, Starter Rope
65	699851		SCREW -(Rewind Starter)
78	795026		SCREW -(Flywheel Guard)
78A	699205		SCREW -(Flywheel Guard)
304	795699		HOUSING, Blower -Used Before Code Date 12012400
304	591545		HOUSING, Blower -Used After Code Date 12012300
305	699481		SCREW -(Blower Housing)
332	794824		NUT -(Flywheel)
363	19203		PULLER, Flywheel
455	795011		CUP, Flywheel
456	692299		PLATE, Pawl Friction
459	281505S		PAWL, Ratchet
597	691696		SCREW -(Pawl Friction Plate)
608A	699335		STARTER, Rewind
689	691855		SPRING, Friction
695	698807		SCREW -(Ring Gear)
727A	697465		COVER, Starter Drive
732	699200		SCREW -(Starter Drive Cover)
930	696709		GUARD, Rewind
1005	794815		FAN, Flywheel
1070	794821		SCREW -(Flywheel Fan)
1210	498144		PULLEY/SPRING ASSEMBLY -(Pulley)
1211	498144		PULLEY/SPRING ASSEMBLY -(Spring)

1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.










1319A WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.

1036 EMISSIONS LABEL

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

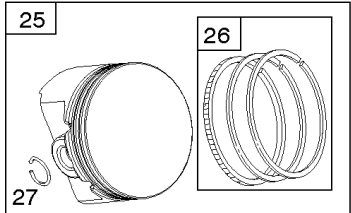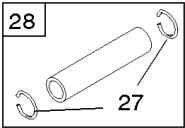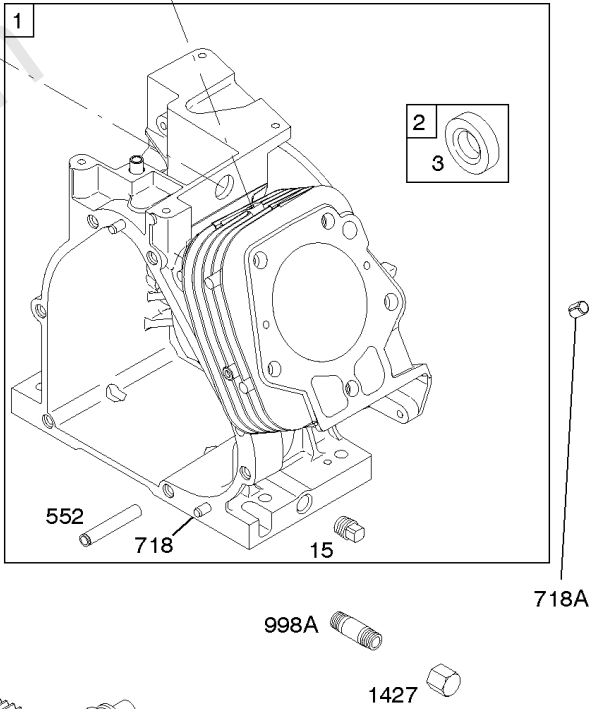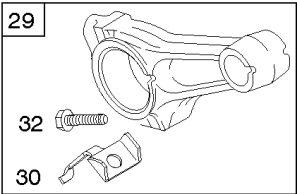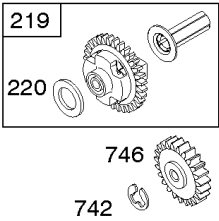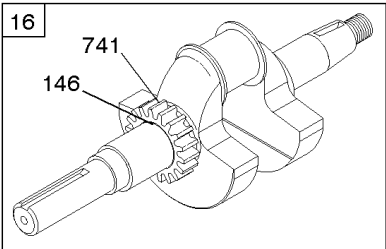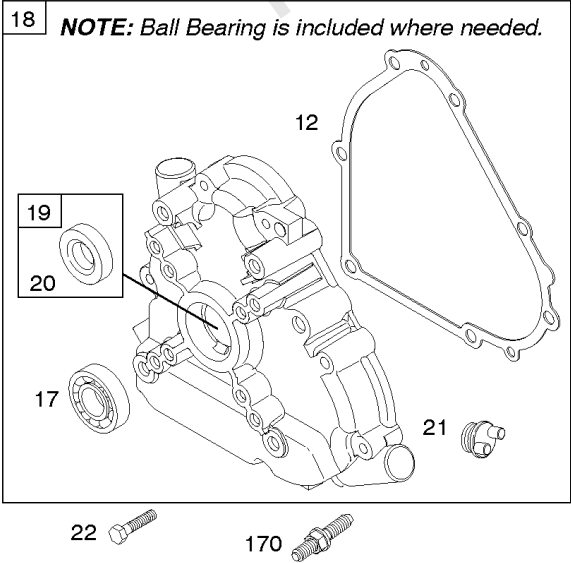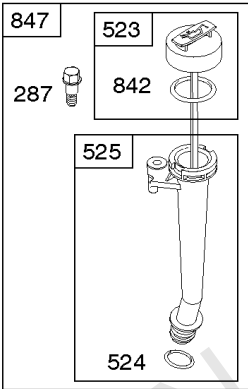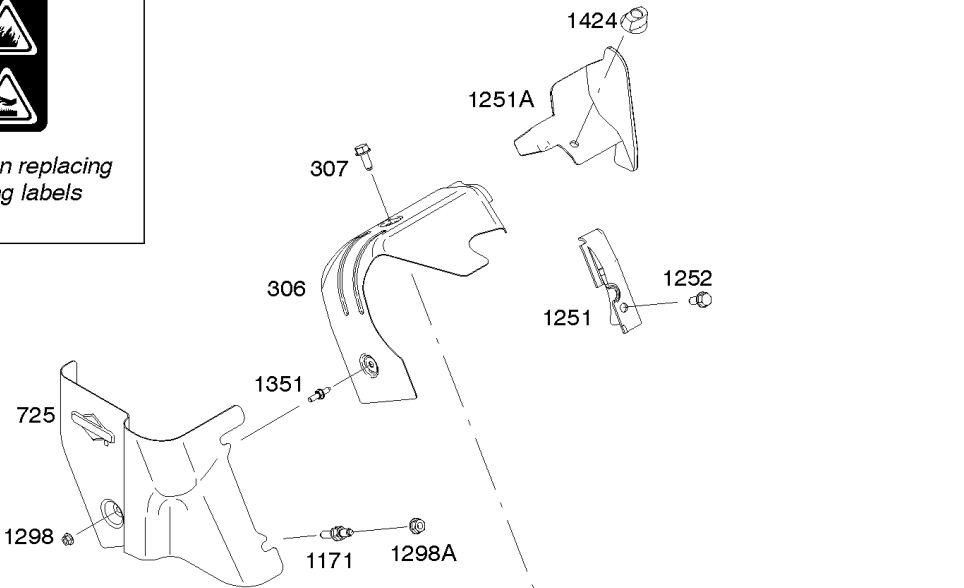

Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Operator's Manual, Piston/

REF NO	PART NO	QTY	DESCRIPTION
1	794849		CYLINDER ASSEMBLY
2	698340		KIT, Bushing/Seal -(Magneto Side)
3	391086S		SEAL, Oil -(Magneto Side)
12	694953		GASKET, Crankcase
15	691686		PLUG, Oil Drain
16	794720		CRANKSHAFT
17	695434		BEARING, Ball
18	791965		COVER, Crankcase
19	698340		KIT, Bushing/Seal -(PTO Side)
20	391086S		SEAL, Oil -(PTO Side)
21	799857		CAP, Oil Fill
22	794825		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	792117		PISTON ASSEMBLY -(Standard)
25	792144		PISTON ASSEMBLY -(.020 Oversize)
26	792026		SET, Ring -(Standard)
26	792073		SET, Ring -(.020" Oversize)
27	690975		LOCK, Piston Pin
28	696581		PIN, Piston -(Standard)
29	694691		ROD, Connecting
30	694692		DIPPER, Connecting Rod
32	690976		SCREW -(Connecting Rod)
46	795697		CAMSHAFT
146	690979		KEY, Woodruff
170	794833		STUD -(Crankcase Cover/Sump)
219	693578		GEAR, Governor
220	691724		WASHER -(Governor Gear)
287	699234		SCREW -(Dipstick Tube)
306	697240		SHIELD, Cylinder
307	794822		SCREW -(Cylinder Shield)
415	691363		PLUG
523	790477		DIPSTICK
524	691876		SEAL, O-Ring
525	792041		TUBE, Dipstick
529	791822		GROMMET
552	694674		BUSHING, Governor Crank
718	690959		PIN, Locating -(Cylinder)
718A	695178		PIN, Locating -(Head)
725	696756		SHIELD, Heat

1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.


1319A WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.

1036 EMISSIONS LABEL


1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

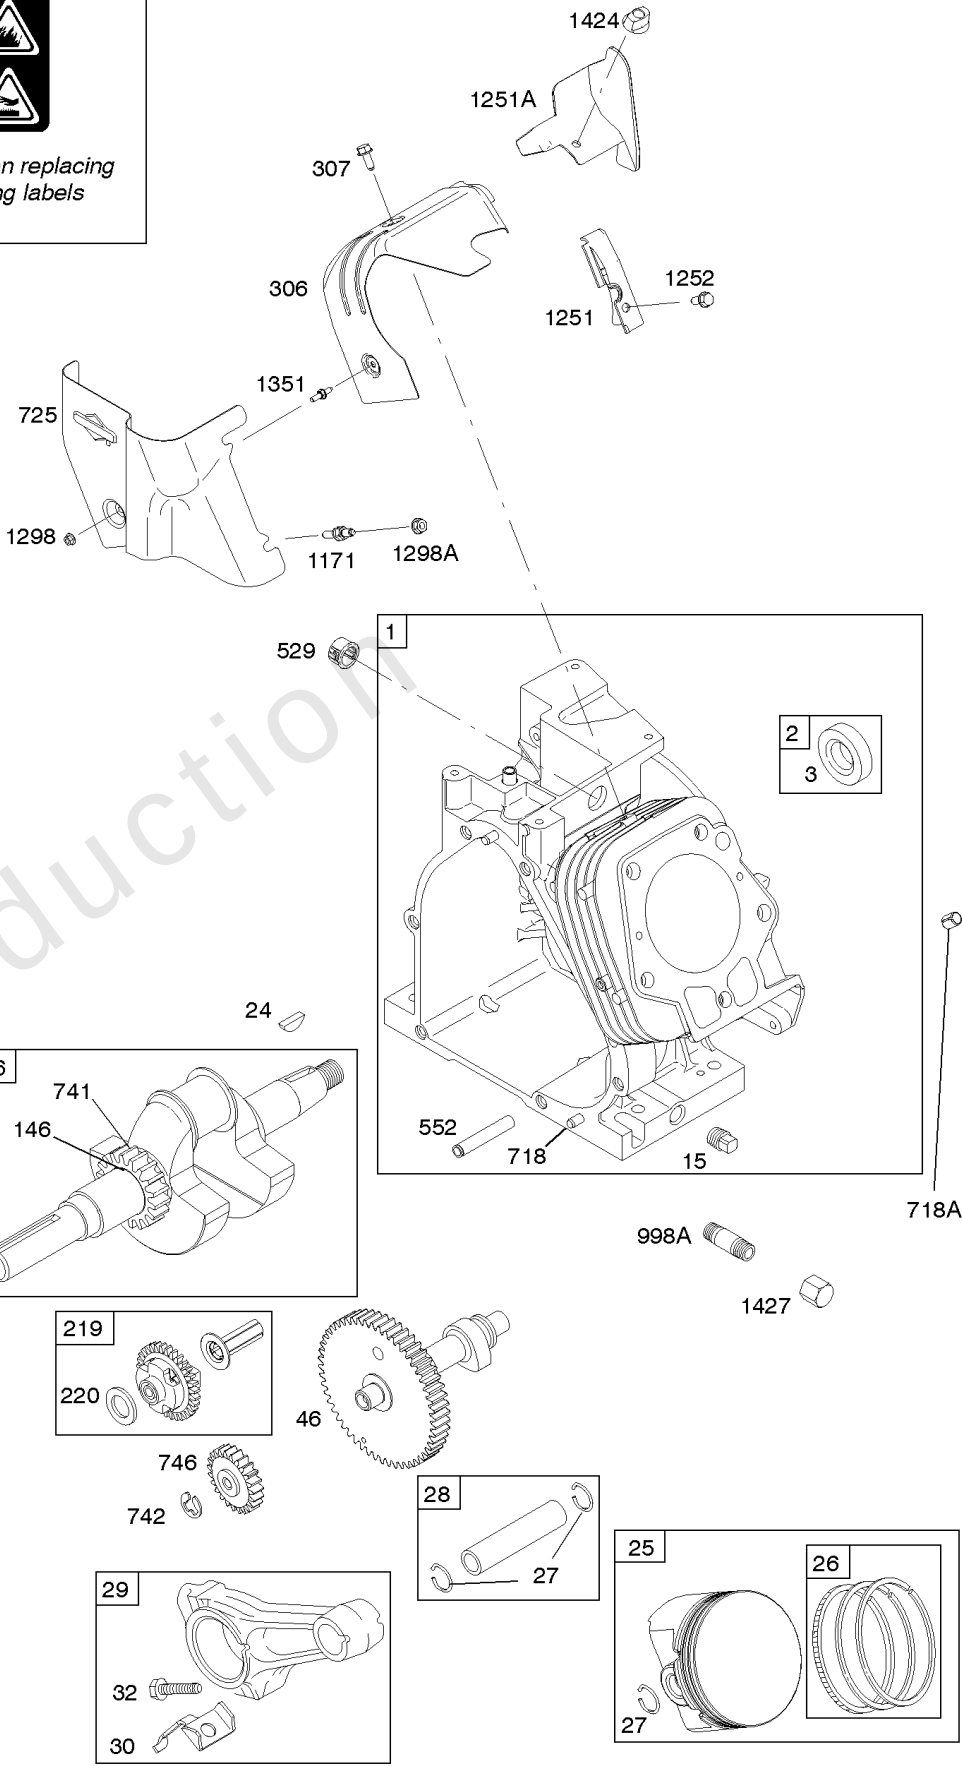


Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Operator's Manual, Piston/

REF NO	PART NO	QTY	DESCRIPTION
741	691288		GEAR, Timing
742	692564		RETAINER, E Ring
746	694679		GEAR, Idler
842	795015		SEAL, O-Ring -(Dipstick Tube)
847	795087		DIPSTICK/TUBE ASSEMBLY
998A	792928		PIPE, Oil
1036	-----		LABEL, Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1058	279128		MANUAL, Operator's
1171	794828		STUD -(Rocker Cover)
1194	691876		SEAL, O-Ring -(Plug)
1251	696762		SHIELD, Snow
1251A	790471		SHIELD, Snow
1252	699481		SCREW -(Snow Shield)
1298	795016		NUT -(Shield-Heat)
1298A	794838		NUT -(Shield-Heat)
1319	794467		LABEL, Warning
1319A	797669		LABEL, Warning
1330	276781		MANUAL, Repair
1351	794847		STUD -(Cylinder Shield)
1424	698111		KNOB, Snow Hood -(Snow Shield)
1427	695757		PLUG, Oil Drain

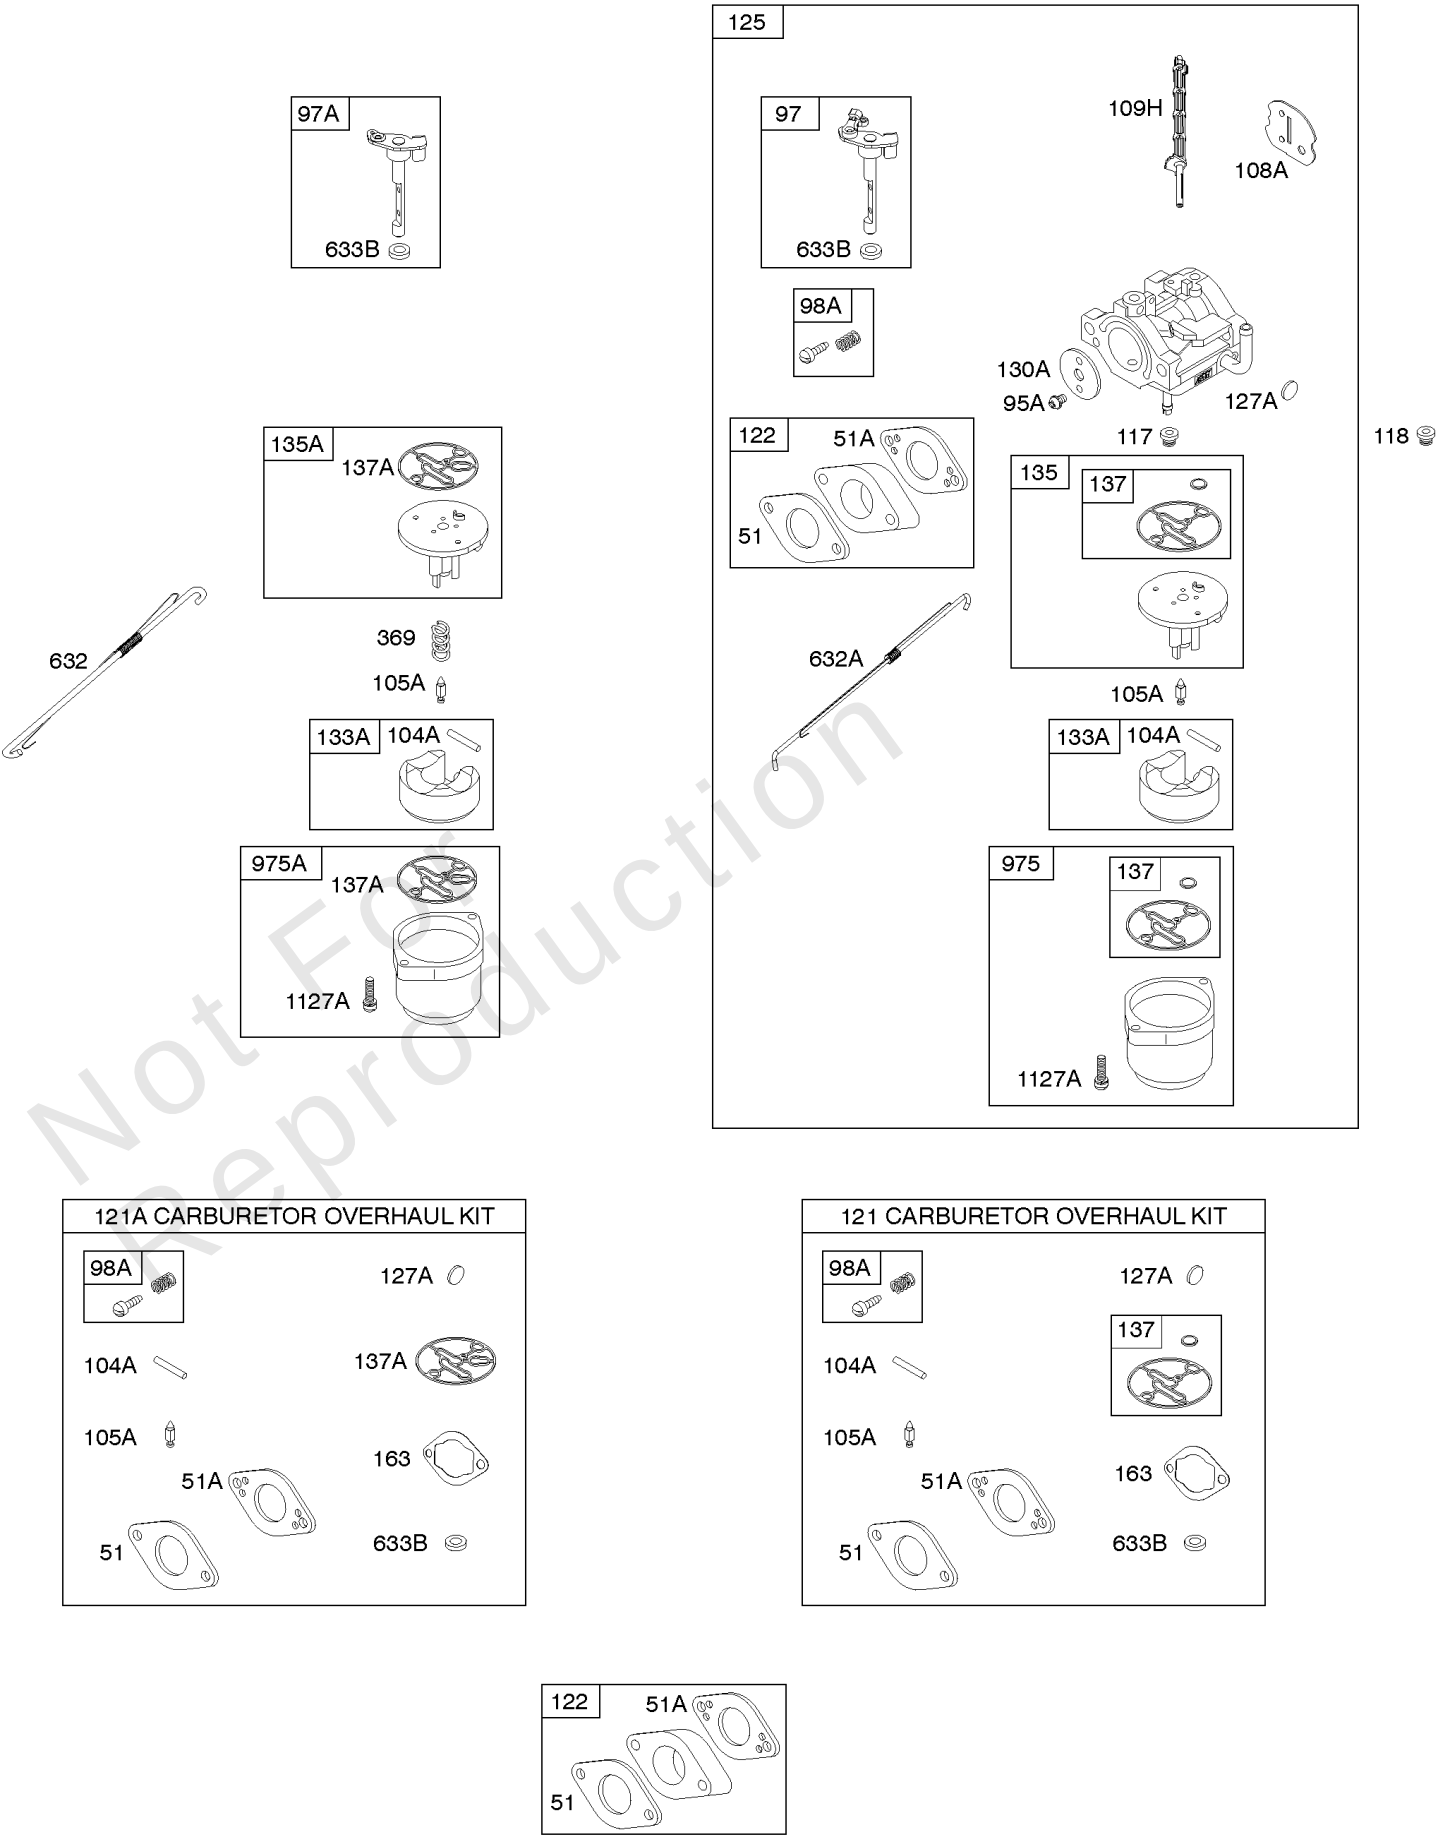


Carburetor, Kit - Carburetor Overhaul

REF NO	PART NO	QTY	DESCRIPTION
51	694874		GASKET, Intake
51A	694875		GASKET, Intake
95A	690718		SCREW -(Throttle Valve)
97	796334		SHAFT, Throttle
97A	696387		SHAFT, Throttle
98A	695408		KIT, Idle Speed
104A	694918		PIN, Float Hinge
105A	696136		VALVE, Float Needle
108A	696143		VALVE, Choke
109H	793520		SHAFT, Choke
117	796080		JET, Main -(Standard) -Used After Code Date 08050600
117	696134		JET, Main -(Standard) -Used Before Code Date 08050700
118	796128		JET, Main -(High Altitude) -Used After Code Date 08050600
118	696135		JET, Main -(High Altitude) -Used Before Code Date 08050700
121	796137		KIT, Carburetor Overhaul
121A	696146		KIT, Carburetor Overhaul
122	694876		SPACER, Carburetor
125	796122		CARBURETOR
127A	690727		PLUG, Welch
130A	696139		VALVE, Throttle
133A	694914		FLOAT, Carburetor
135	698780		TUBE, Fuel Transfer
135A	696142		TUBE, Fuel Transfer
137	698781		GASKET, Float Bowl
137A	695426		GASKET, Float Bowl
163	692277		GASKET, Air Cleaner -(Air Cleaner)
369	695422		SPRING, Float Bowl
632	695917		SPRING/LINK, Mechanical Governor -Used Before Code Date 08050700
632A	796324		SPRING/LINK, Mechanical Governor -Used After Code Date 08050600
633B	690998		SEAL, Choke/Throttle Shaft
975	698783		BOWL, Float
975A	696138		BOWL, Float
1127A	695407		SCREW -(Float Bowl) (Float Bowl to Carburetor Body)

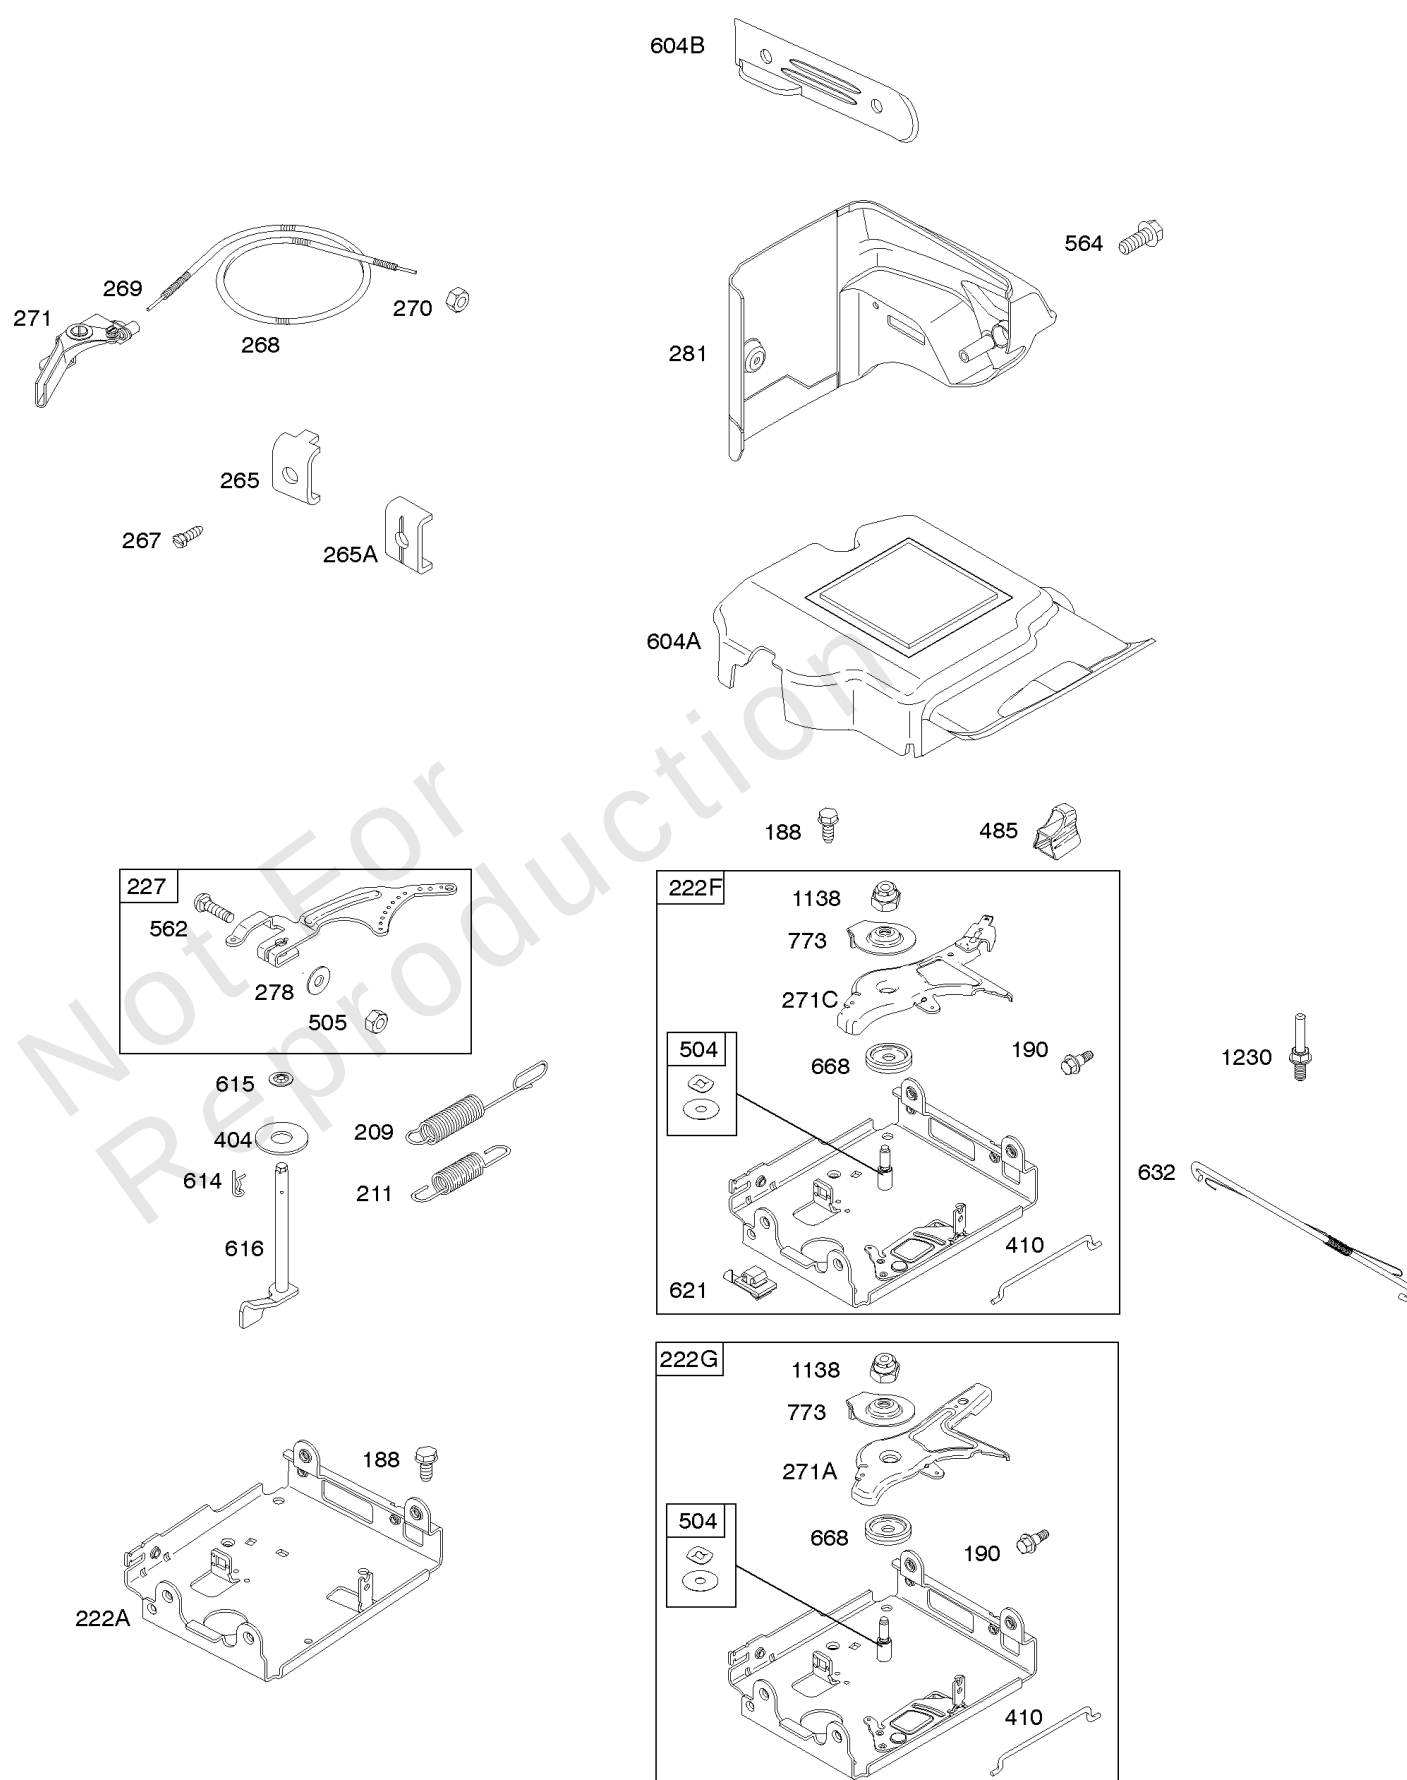

Controls, Governor Spring


REF NO	PART NO	QTY	DESCRIPTION
188	699479		SCREW -(Control Bracket)
190	699220		SCREW -(Fuel Tank)
209	694867		SPRING, Governor
211	695307		SPRING, Governed Idle
222F	794800		BRACKET, Control
227	694864		LEVER, Governor Control
265	691024		CLAMP, Casing
265A	692179		CLAMP, Casing
267	699492		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
271C	797554		LEVER, Control
278	792008		WASHER -(Governor Lever) -Used Before Code Date 09101900
278	798196		WASHER -(Governor Control Lever) -Used After Code Date 09101800
281	695294		PANEL, Control
404	795759		WASHER -(Governor Crank)
410	695382		LINK, Control
485	695755		KNOB, Control
504	695383		SET, Friction Washer
505	691251		NUT -(Governor Control Lever) -Used Before Code Date 09101900
505	793515		NUT -(Governor Control Lever) -Used After Code Date 09101800
562	793216		BOLT -(Governor Lever) -Used Before Code Date 09101900
562	798197		BOLT -(Governor Control Lever) -Used After Code Date 09101800
564	699854		SCREW -(Control Cover)
604A	696758		COVER, Control
604B	790473		COVER, Control
614	691620		PIN, Cotter -(Governor Crank)
615	694676		RETAINER, Governor Shaft -(Governor Gear) -Used Before Code Date 08021500
616	795758		CRANK, Governor
621	692310		SWITCH, Stop
632	695917		SPRING/LINK, Mechanical Governor -Used Before Code Date 08050700
668	694257		SPACER -(Control Bracket)

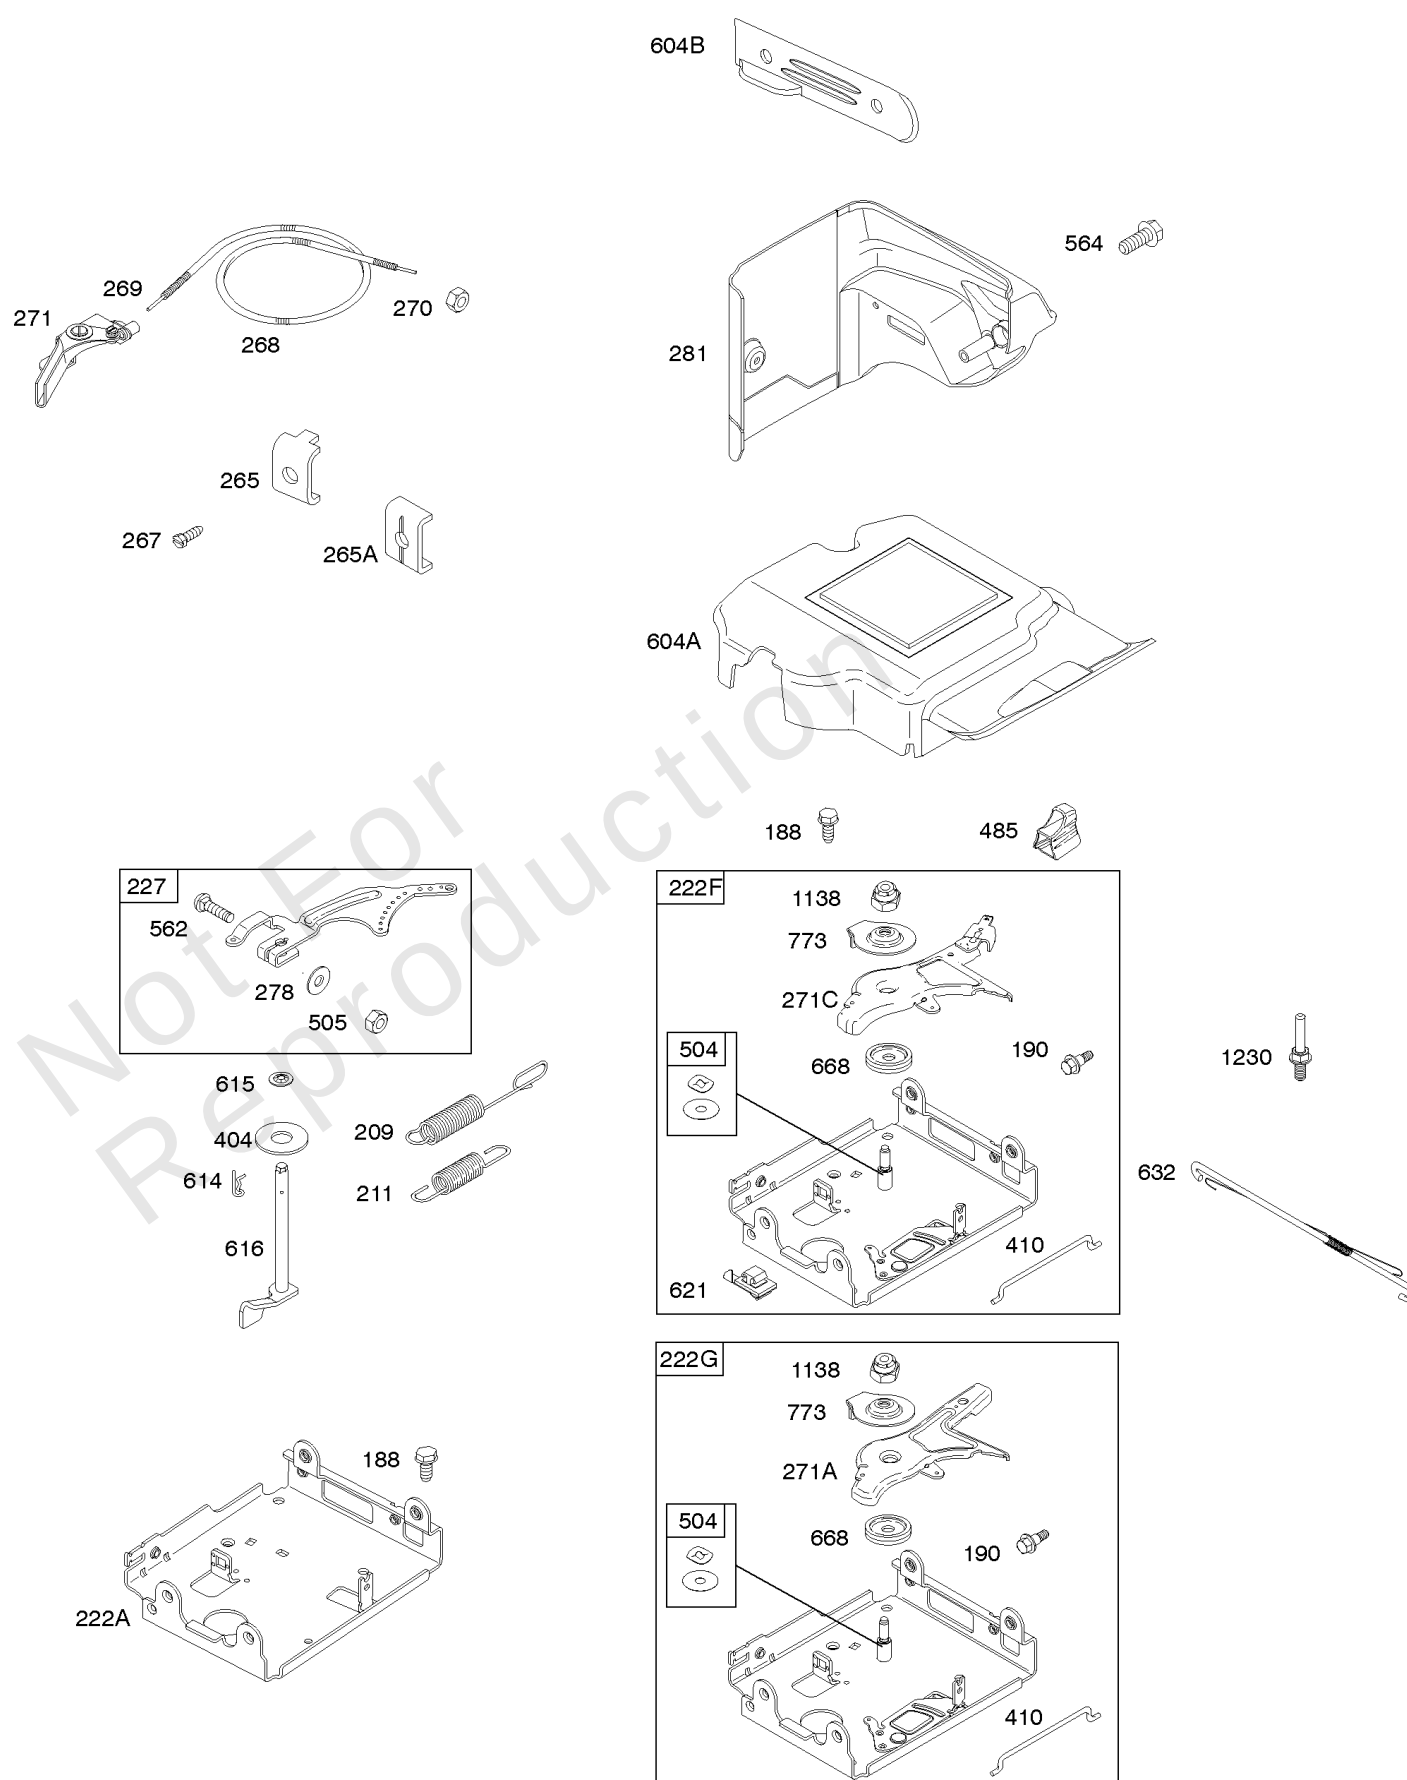

Controls, Governor Spring







REF NO	PART NO	QTY	DESCRIPTION
773	694258		RETAINER
1138	694255		NUT -(Control Bracket)
1230	699847		STUD -(Control Bracket)

Not For Reproduction

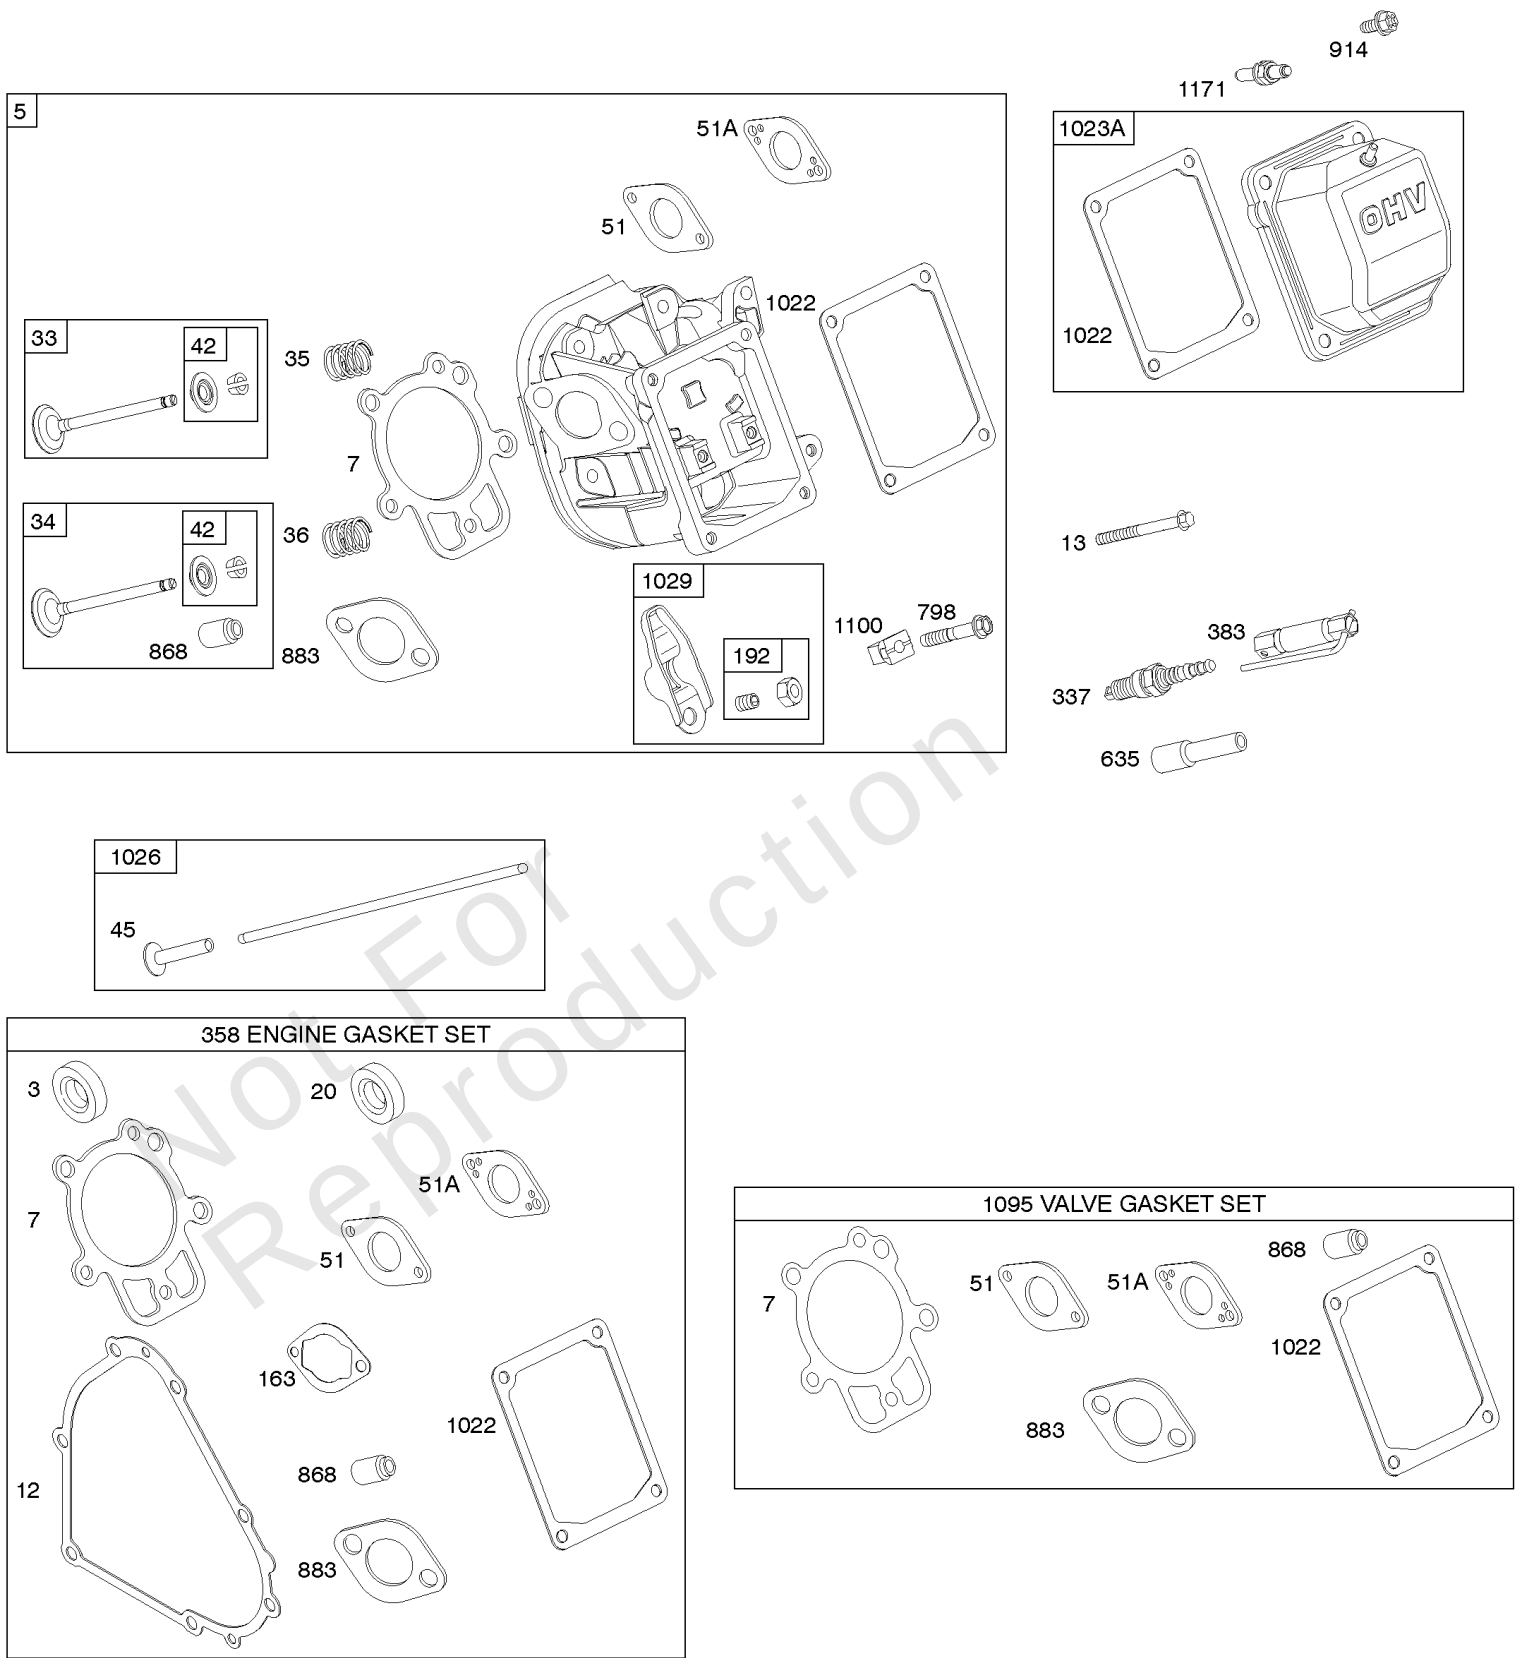

Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Valves

REF NO	PART NO	QTY	DESCRIPTION
3	391086S		SEAL, Oil -(Magneto Side)
5	799860		HEAD, Cylinder
7	694872		GASKET, Cylinder Head
12	694953		GASKET, Crankcase
13	794829		SCREW -(Cylinder Head)
20	391086S		SEAL, Oil -(PTO Side)
33	697576		VALVE, Exhaust
34	795199		VALVE, Intake
35	694865		SPRING, Valve -(Intake)
36	694865		SPRING, Valve -(Exhaust)
42	499586		KEEPER, Valve
45	690977		TAPPET, Valve
51	694874		GASKET, Intake
51A	694875		GASKET, Intake
163	692277		GASKET, Air Cleaner -(Air Cleaner)
192	690083		ADJUSTER, Rocker Arm
337	491055S		PLUG, Spark
358	795201		GASKET SET, Engine
383	19576S		WRENCH, Spark Plug
635	691909		BOOT, Spark Plug -(Alternator)
798	697890		SCREW -(Rocker Arm)
868	794086		SEAL, Valve
883	695398		GASKET, Exhaust
914	794827		SCREW -(Rocker Cover)
1022	690971		GASKET, Rocker Cover
1023A	698042		COVER, Rocker
1026	592673		ROD, Push
1029	690972		ARM, Rocker
1095	795200		GASKET SET, Valve
1100	791959		PIVOT, Rocker Arm
1171	794828		STUD -(Rocker Cover)

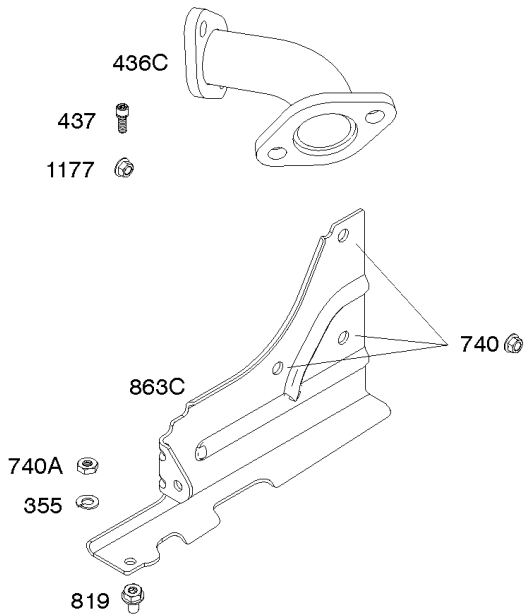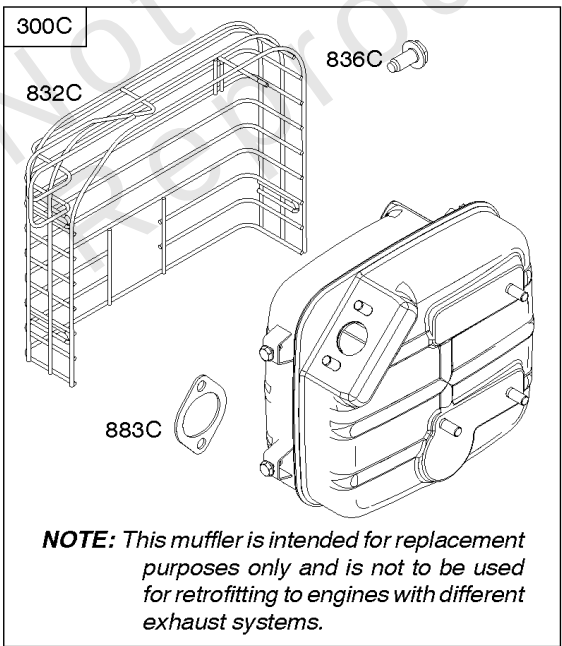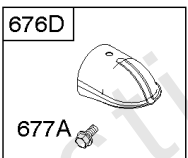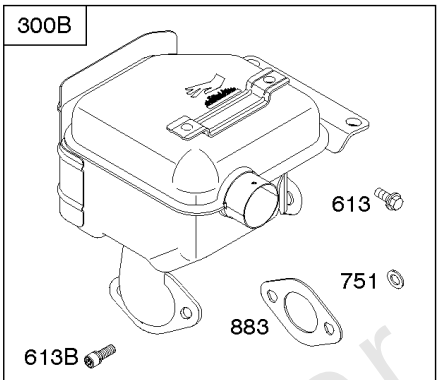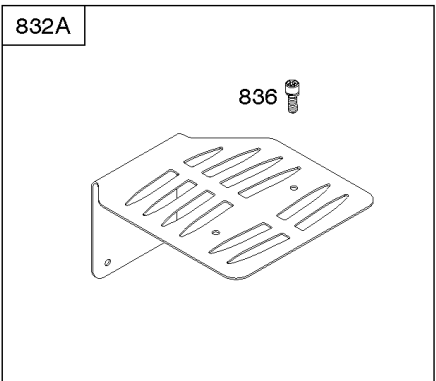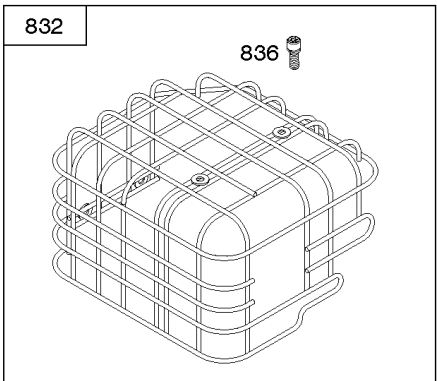

Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
300B	794948		MUFFLER
300C	793701		MUFFLER
355	794842		WASHER -(Muffler Bracket)
436C	792374		MANIFOLD, Exhaust
437	794844		SCREW -(Exhaust Manifold)
613	794846		SCREW -(Muffler)
613B	794844		SCREW -(Muffler)
676D	794213		DEFLECTOR, Muffler
677A	699776		SCREW -(Muffler Deflector)
740	710090		LOCKNUT -(Muffler Bracket)
740A	794843		NUT -(Muffler Bracket)
751	794839		WASHER -(Stop Wire)
819	794832		SCREW -(Muffler Bracket)
832	796384		GUARD, Muffler
832A	797095		MUFFLER
832C	792380		MUFFLER
836	699234		SCREW -(Muffler Guard)
836C	710023		SCREW -(Muffler Guard)
863C	793700		BRACKET, Muffler
883	695398		GASKET, Exhaust
883C	710250		GASKET, Exhaust
1177	710090		LOCKNUT -(Muffler)

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	21M3143017	1	Replacement Engine
	794910	1	Replacement Short Block
	-----		Top No-Load Speed: 3600 -Trim: ALL
	-----		Service Note: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.
	-----		Service Note: Transfer Alternator Assembly from original engine to replacement engine.

